

OPUS W5

WASH MOVING HEAD
DMX CONTROL TABLE



EN	The DMX Delay channel is only activated in DMX modes when menu item DMX Delay is set to by DMX? Yes .
DE	Der Kanal DMX Delay ist in den DMX-Modi nur aktiviert, wenn im Menüpunkt DMX Delay unter by DMX? Yes eingestellt ist.
FR	Le décalage DMX de canal n'est activé dans le mode DMX que lorsque l'option DMX Delay est réglée sur Yes sous by DMX ? .
ES	El canal DMX Delay solo está activado en los modos DMX si en la opción de menú DMX Delay , en by DMX? , está ajustada la opción Yes .
PL	Kanał DMX Delay jest aktywowany w trybach DMX tylko wtedy, gdy w pozycji menu DMX Delay w opcji by DMX? zostanie ustawiona wartość Yes .
IT	Il canale DMX Delay è attivo in modalità DMX solo se nella voce di menu DMX Delay l'opzione by DMX? è impostata su Yes .

29		46		CH Mode				Sub-Group
Standard	Extended	Function	Values					
1	1	Pan	000	-	255	0% to 100%		Pan
2	2	Pan fine	000	-	255	0% to 100%		
3	3	Tilt	000	-	255	0% to 100%		Tilt
4	4	Tilt fine	000	-	255	0% to 100%		
5	5	Dimmer	000	-	255	0% to 100%		Dimmer
6	6	Dimmer fine	000	-	255	0% to 100%		
7	7	Strobe functions	000	-	005	Strobe open		Multifunctional Strobe
			006	-	010	Strobe closed		
			011	-	022	Ramp up/down, slow -> fast		
			023	-	033	Ramp up/down random, slow->fast		
			034	-	045	Ramp up, slow -> fast		
			046	-	056	Ramp up random, slow -> fast		
			057	-	068	Ramp down, slow -> fast		
			069	-	079	Ramp down random, slow -> fast		
			080	-	102	Random Strobe effect, slow -> fast		
			103	-	127	Strobe Break effect, 5s.....1s (short burst with break)		
			128	-	250	Strobe slow -> fast <1Hz - 20Hz		
			251	-	255	Strobe open		
8	8	Cyan	000	-	255	0% to 100%		Cyan
	9	Cyan fine	000	-	255	0% to 100%		
9	10	Magenta	000	-	255	0% to 100%		Magenta
	11	Magenta fine	000	-	255	0% to 100%		
10	12	Yellow	000	-	255	0% to 100%		Yellow
	13	Yellow fine	000	-	255	0% to 100%		
11	14	CTO	000	-	255	0% to 100%		CTO
	15	CTO fine	000	-	255	0% to 100%		
12	16	Color Wheel 1	000	-	000	Color open		Color Wheel 1
			001	-	023	Open -> Red		
			024	-	024	Red (1)		
			025	-	047	Red -> Medium Blue		
			048	-	048	Medium Blue (2)		
			049	-	071	Medium Blue -> Deep Green		

OPUS W5

WASH MOVING HEAD
DMX CONTROL TABLE



12	16	Color Wheel 1	072	-	072	Deep Green (3)	Color Wheel 1
			073	-	095	Depp Green -> Deep Orange	
			096	-	096	Deep Orange (4)	
			097	-	119	Deep Orange -> Forest Green	
			120	-	120	Forest Green (5)	
			121	-	143	Forest Green -> Congo Blue	
			144	-	144	Congo Blue (6)	
			145	-	167	Congo Blue -> Hi-CRI	
			168	-	168	Hi-CRI (7)	
			169	-	191	Hi-CRI -> Open	
			192	-	192	Color open	
			193	-	223	Color Wheel rot. fast -> slow, fwd	
			224	-	224	Color Wheel rot. stop	
			225	-	255	Color Wheel rot. slow -> fast, bwd	
				17	Color Wheel 1 fine	000	
13	18	Color Wheel 2	000	-	000	Color open	Color Wheel 2
			001	-	023	Open -> CTO 2600K	
			024	-	024	CTO 2600K (1)	
			025	-	047	CTO 2600K -> CTO 3200K	
			048	-	048	CTO 3200K (2)	
			049	-	071	CTO 3200K -> CTB 7500K	
			072	-	072	CTB 7500K (3)	
			073	-	095	CTB 7500K -> CTB 9000K	
			096	-	096	CTB 9000K (4)	
			097	-	119	CTB 9000K -> Lavender	
			120	-	120	Lavender (5)	
			121	-	143	Lavender -> Pink	
			144	-	144	Pink (6)	
			145	-	167	Pink -> UV	
			168	-	168	UV (7)	
			169	-	191	UV -> Open	
			192	-	192	Color open	
			193	-	223	Color Wheel rot. fast -> slow, fwd	
			224	-	224	Color Wheel rot. stop	
			225	-	255	Color Wheel rot. slow -> fast, bwd	
	19	Color Wheel 2 fine	000	-	255	0% to 100% (position and speed)	
14	20	Zoom	000	-	255	Narrow to wide	Zoom
	21	Zoom fine	000	-	255	Narrow to wide	
15	22	Focus	000	-	255	0% to 100%	Focus
		23	Focus fine	000	-	255	
16	24	Iris	000	-	191	Open -> Close	Iris
			192	-	200	Pulse, slow -> fast (with Dim)	
			201	-	209	Pulse, slow -> fast (without Dim)	
			210	-	218	Pulse Random, slow -> fast (without Dim)	

OPUS W5

WASH MOVING HEAD

DMX CONTROL TABLE



16	24	Iris	219	-	227	Ramp up, slow -> fast (with Dim)	Iris			
			228	-	236	Ramp up, slow -> fast (without Dim)				
			237	-	245	Ramp down, slow -> fast (with Dim)				
			246	-	255	Ramp down, slow -> fast (without Dim)				
17	25	Frost heavy	000	-	255	0% to 100%	Frost			
18	26	Blade 1A	000	-	255	0% to 100%	Framing			
			27	-	255	0% to 100%				
			19	28	Blade 1B	000		-	255	0% to 100%
			29	Blade 1B fine	000	-		255	0% to 100%	
			20	30	Blade 2A	000		-	255	0% to 100%
			31	Blade 2A fine	000	-		255	0% to 100%	
			21	32	Blade 2B	000		-	255	0% to 100%
			33	Blade 2B fine	000	-		255	0% to 100%	
			22	34	Blade 3A	000		-	255	0% to 100%
			35	Blade 3A fine	000	-		255	0% to 100%	
			23	36	Blade 3B	000		-	255	0% to 100%
			37	Blade 3B fine	000	-		255	0% to 100%	
			24	38	Blade 4A	000		-	255	0% to 100%
			39	Blade 4A fine	000	-		255	0% to 100%	
			25	40	Blade 4B	000		-	255	0% to 100%
			41	Blade 4B fine	000	-		255	0% to 100%	
			26	42	Shape Rotation	000		-	255	0% to 100%
			43	Shape Rotation fine	000	-		255	0% to 100%	
			27	44	Pan/Tilt Macro	000		-	005	off
006	-	040				PAN "small > big"				
041	-	075				TILT "small > big"				
076	-	110				PAN / TILT "small > big"				
111	-	145				PAN / TILT (invers) "small > big"				
146	-	180				Circle "small > big"				
181	-	215				Circle (invers) "small > big"				
216	-	255	Random "small > big"							
28	45	Pan/Tilt Speed	000	-	255	Pan/Tilt speed fast -> slow				
29	46	Device settings (please read remark 1*)	000	-	005	No function	Control			
			006	-	007	Blackout while moving on (hold 3s)				
			008	-	009	Blackout while moving off (hold 3s)				
			010	-	017	No function				
			018	-	019	Blackout while Color moving on (hold 3s)				
			020	-	021	Blackout while Color moving off (hold 3s)				
			022	-	041	No function				
			042	-	043	Invert Pan on (hold 3s)				
			044	-	045	Invert Pan off (hold 3s)				
			046	-	047	Invert Tilt on (hold 3s)				
			048	-	049	Invert Tilt off (hold 3s)				
			050	-	051	Pan Angle 540° (hold 3s)				

OPUS W5

WASH MOVING HEAD
DMX CONTROL TABLE



29	46	Device settings (please read remark 1*)	052	-	053	Pan Angle 630° (hold 3s)	Control
			054	-	073	No function	
			074	-	075	Dimmer Response LED (hold 1,5 s)	
			076	-	077	Dimmer Response (hold 1,5 s)	
			078	-	093	No function	
			094	-	095	Silent movement (slow) on (hold 3s)	
			096	-	097	Silent movement (slow) off (hold 5s)	
			098	-	099	Fan off (hold 3s)	
			100	-	101	Silent Fan (hold 3s)	
			102	-	103	Auto Fan (hold 3s)	
			104	-	119	No function	
			120	-	121	PWM 650 Hz (hold 3s)	
			122	-	123	PWM 1530 Hz (hold 3s)	
			124	-	125	PWM 3600 Hz (hold 3s)	
			126	-	127	PWM 12kHz (hold 3s)	
			128	-	129	PWM 18,9kHz (hold 3s)	
			130	-	131	PWM 25kHz (hold 3s)	
			132	-	139	No function	
			140	-	141	Display on (hold 3s)	
			142	-	143	Display off (hold 3s)	
			144	-	147	No function	
			148	-	149	Color Wheel snap (hold 3s)	
			150	-	151	Color Wheel scroll (hold 3s)	
			152	-	163	No function	
			164	-	165	Dimmer Curve Linear (hold 3s)	
			166	-	167	Dimmer Curve Exponential (hold 3s)	
			168	-	169	Dimmer Curve Logarithmic (hold 3s)	
			170	-	171	Dimmer Curve S-Curve (hold 3s)	
			172	-	209	No function	
			210	-	211	Color Pos Mode quick (hold 3s)	
			212	-	213	Color Pos Mode Clockwise (hold 3s)	
			214	-	221	No function	
			222	-	223	Reset Pan / Tilt (hold 3s)	
224	-	233	No function				
234	-	235	Reset Head complete (hold 3s)				
236	-	237	Reset All Functions (hold 3s)				
238	-	255	No function				

EN: (1*) After the adjustments have been made, set the value to 000 to avoid disturbance by endless function call.

DE: (1*) Nachdem die Einstellungen vorgenommen wurden, stellen Sie den Wert auf 000 ein, um Störungen durch endlosen Funktionsaufruf zu vermeiden.

FR: (1*) Une fois les ajustements effectués, réglez la valeur sur 000 pour éviter les perturbations par appel de fonction sans fin.

ES: (1*) Después de realizar los ajustes, establezca el valor en 000 para evitar perturbaciones mediante una llamada de función sin fin.

PL: (1*) Po dokonaniu ustawień ustaw wartość na 000, aby uniknąć zakłóceń przez niekończące się wywołanie funkcji.

IT: (1*) Dopo aver effettuato le regolazioni, impostare il valore su 000 per evitare disturbi causati da una chiamata a funzione infinita.