

NANOSPOT 300

DMX CONTROL TABLE



| 5-CH Mode | | | | | |
|-----------|------------------|-----|---|-----|--------------------------------------|
| CH1 | Mechanic Control | 000 | - | 255 | Pan Rotation |
| CH2 | | 000 | - | 255 | Tilt Rotation |
| CH3 | | 000 | - | 255 | Motor Running Speed (fast to slow) |
| CH4 | Light Control | 000 | - | 010 | white |
| | | 011 | - | 021 | red |
| | | 022 | - | 032 | orange |
| | | 033 | - | 043 | yellow |
| | | 044 | - | 054 | green |
| | | 055 | - | 065 | blue |
| | | 066 | - | 076 | cyan |
| | | 077 | - | 087 | purple |
| | | 088 | - | 175 | colour selection (smooth shift) |
| | | 176 | - | 255 | colour wheel rotation (slow to fast) |
| CH5 | | 000 | - | 255 | General Dimmer |

| 9-CH Mode | | | | | |
|-----------|------------------|-----|---|-----|------------------------------------|
| CH1 | Mechanic Control | 000 | - | 255 | Pan Rotation |
| CH2 | | 000 | - | 255 | Tilt Rotation |
| CH3 | | 000 | - | 255 | Pan Fine |
| CH4 | | 000 | - | 255 | Tilt Fine |
| CH5 | | 000 | - | 255 | Motor Running Speed (fast to slow) |

| | | | | | |
|-----|---------------|-----|---|-----|--------------------------------------|
| CH6 | | 000 | - | 010 | white |
| | | 011 | - | 021 | red |
| | | 022 | - | 032 | orange |
| | | 033 | - | 043 | yellow |
| | | 044 | - | 054 | green |
| | | 055 | - | 065 | blue |
| | | 066 | - | 076 | cyan |
| | | 077 | - | 087 | purple |
| | | 088 | - | 175 | colour selection (smooth shift) |
| CH7 | Light Control | 176 | - | 255 | colour wheel rotation (slow to fast) |
| | | 000 | - | 015 | Gobo open |
| | | 016 | - | 031 | Gobo 1 |
| | | 032 | - | 046 | Gobo 2 |
| | | 047 | - | 062 | Gobo 3 |
| | | 063 | - | 078 | Gobo 4 |
| | | 079 | - | 093 | Gobo 5 |
| | | 094 | - | 109 | Gobo 6 |
| | | 110 | - | 124 | Gobo 7 |
| | | 125 | - | 140 | shaky Gobo 7 (slow -> fast) |
| | | 141 | - | 156 | shaky Gobo 6 (slow -> fast) |
| | | 157 | - | 171 | shaky Gobo 5 (slow -> fast) |
| | | 172 | - | 187 | shaky Gobo 4 (slow -> fast) |
| | | 188 | - | 203 | shaky Gobo 3 (slow -> fast) |
| | | 204 | - | 218 | shaky Gobo 2 (slow -> fast) |
| | | 219 | - | 234 | shaky Gobo 1 (slow -> fast) |
| | | 235 | - | 249 | Gobo open |
| | | 250 | - | 255 | Gobo wheel rotation |
| | | CH8 | | 000 | - |
| CH9 | Strobe | 000 | - | 009 | no Strobe |
| | | 010 | - | 255 | Strobe Speed (slow to fast) |

| 11-CH Mode | | | | | |
|------------|------------------|-----|---|-----|------------------------------------|
| CH1 | Mechanic Control | 000 | - | 255 | Pan Rotation |
| CH2 | | 000 | - | 255 | Tilt Rotation |
| CH3 | | 000 | - | 255 | Pan Fine |
| CH4 | | 000 | - | 255 | Tilt Fine |
| CH5 | | 000 | - | 255 | Motor Running Speed (fast to slow) |

| | | | | | | | |
|------|------------------|-----|--------|-----|--|-----|----------------|
| CH6 | | 000 | - | 010 | white | | |
| | | 011 | - | 021 | red | | |
| | | 022 | - | 032 | orange | | |
| | | 033 | - | 043 | yellow | | |
| | | 044 | - | 054 | green | | |
| | | 055 | - | 065 | blue | | |
| | | 066 | - | 076 | cyan | | |
| | | 077 | - | 087 | purple | | |
| | | 088 | - | 175 | colour selection (smooth shift) | | |
| CH7 | Light Control | 176 | - | 255 | colour wheel rotation (slow to fast) | | |
| | | 000 | - | 015 | Gobo open | | |
| | | 016 | - | 031 | Gobo 1 | | |
| | | 032 | - | 046 | Gobo 2 | | |
| | | 047 | - | 062 | Gobo 3 | | |
| | | 063 | - | 078 | Gobo 4 | | |
| | | 079 | - | 093 | Gobo 5 | | |
| | | 094 | - | 109 | Gobo 6 | | |
| | | 110 | - | 124 | Gobo 7 | | |
| | | 125 | - | 140 | shaky Gobo 7 (slow -> fast) | | |
| | | 141 | - | 156 | shaky Gobo 6 (slow -> fast) | | |
| | | 157 | - | 171 | shaky Gobo 5 (slow -> fast) | | |
| | | 172 | - | 187 | shaky Gobo 4 (slow -> fast) | | |
| | | 188 | - | 203 | shaky Gobo 3 (slow -> fast) | | |
| | | 204 | - | 218 | shaky Gobo 2 (slow -> fast) | | |
| | | 219 | - | 234 | shaky Gobo 1 (slow -> fast) | | |
| | | 235 | - | 249 | Gobo open | | |
| | | 250 | - | 255 | Gobo wheel rotation | | |
| | | CH8 | | 000 | - | 255 | General Dimmer |
| | | CH9 | Strobe | 000 | - | 009 | no Strobe |
| 010 | - | | | 255 | Strobe Speed (slow to fast) | | |
| CH10 | Sound-/Auto-Mode | 000 | - | 029 | control CH1 - CH9 | | |
| | | 030 | - | 055 | Auto Mode show 1 | | |
| | | 056 | - | 081 | Auto Mode show 2 | | |
| | | 082 | - | 107 | Auto Mode show 3 | | |
| | | 108 | - | 133 | Auto Mode show 4 | | |
| | | 134 | - | 159 | Auto Mode show 5 | | |
| | | 160 | - | 185 | Auto Mode show 6 | | |
| | | 186 | - | 211 | Auto Mode show 7 | | |
| | | 212 | - | 237 | Sound Mode | | |
| | | 238 | - | 250 | Reset | | |
| | | 251 | - | 255 | Sync (Head goes to mid position and blackout) | | |
| CH11 | | 000 | - | 255 | Speed/Sensitivity (slow to fast / low to high) | | |