

G4 TW

GALLERY LIGHT WITH TUNABLE WHITE LED
DMX CONTROL TABLE



1CH	2CH 16 Bit	2CH WW-CW	2 CH CCT	Function	Values				
1	1		1	Dimmer	000	-	255	0% to 100%	
Preselect color in Stand Alone Mode Tunable White CCT	2			Dimmer fine	000	-	255	0% to 100%	
		1		Warm White	000	-	255	0% to 100%	
		2		Cold White	000	-	255	0% to 100%	
				2		000	-	006	Warm white
						007	-	046	Warm white -> 2700K
						047	-	047	Bulb White (2700K)
						048	-	087	2700K -> 3200K
						088	-	088	Halogen White (3200K)
						089	-	128	3200K -> 4000K
						129	-	129	Neutral White (4000K)
						130	-	169	4000K -> 5600K
						170	-	170	Studio-White (5600K)
						171	-	210	5600K -> 6500K
		211	-	211	Daylight White (6500K)				
		212	-	251	6500K -> cold Daylight				
	252	-	255	Cold Daylight					

7CH 16Bit	Function	Values			Sub-Group	
1	Dimmer	000	-	255	Dimmer	
2	Dimmer fine	000	-	255		
3	Strobe functions	000	-	005	Strobe open	Multifunctional Strobe
		006	-	010	Strobe closed	
		011	-	022	Ramp up/down, slow -> fast	
		023	-	033	Ramp up/down random, slow->fast	
		034	-	045	Ramp up, slow -> fast	
		046	-	056	Ramp up random, slow -> fast	
		057	-	068	Ramp down, slow -> fast	
		069	-	079	Ramp down random, slow -> fast	
		080	-	102	Random Strobe effect, slow -> fast	
103	-	127	Strobe Break effect, 5s.....1s (short burst with break)			

G4 TW

GALLERY LIGHT WITH TUNABLE WHITE LED
DMX CONTROL TABLE



3	Strobe functions	128 - 250	Strobe slow -> fast <1Hz - 20Hz	Multifunctional Strobe
		251 - 255	Strobe open	
4	Warm White	000 - 255	0% to 100%	Warm White
5	Cold White	000 - 255	0% to 100%	Cold White
6	Color Temperature	000 - 005	No function	CCT
		006 - 006	Warm white	
		007 - 046	Warm white -> 2700K	
		047 - 047	Bulb White (2700K)	
		048 - 087	2700K -> 3200K	
		088 - 088	Halogen White (3200K)	
		089 - 128	3200K -> 4000K	
		129 - 129	Neutral White (4000K)	
		130 - 169	4000K -> 5600K	
		170 - 170	Studio-White (5600K)	
		171 - 210	5600K -> 6500K	
		211 - 211	Daylight White (6500K)	
		212 - 251	6500K -> cold Daylight	
252 - 255	Cold Daylight			
7	Device settings (please read remark 1*)	000 - 073	No function	Device settings
		074 - 075	Dimmer Response LED (hold 3s)	
		076 - 077	Dimmer Response Halogen (hold 3s)	
		078 - 085	No function	
		086 - 087	No function	
		088 - 089	No function	
		090 - 119	No function	
		120 - 121	PWM 1 (800 Hz) (hold 3s)	
		122 - 123	PWM 2 (1200 Hz)(hold 3s)	
		124 - 125	PWM 3 (2000 Hz)(hold 3s)	
		126 - 127	PWM 4 (3600 Hz)(hold 3s)	
		128 - 129	PWM 5 (12 KHz)(hold 3s)	
		130 - 131	PWM 6 (25 KHz)(hold 3s)	
		132 - 163	No function	
		164 - 165	Dimmer Curve Linear (hold 3s)	
		166 - 167	Dimmer Curve Exponential (hold 3s)	
168 - 169	Dimmer Curve Logarithmic (hold 3s)			
170 - 171	Dimmer Curve S-Curve (hold 3s)			
172 - 173	CCT fade constant brightness on (hold 3s)			

G4 TW

GALLERY LIGHT WITH TUNABLE WHITE LED
DMX CONTROL TABLE



7	Device settings	174	-	175	CCT fade constant brightness off (hold 3s)	Device settings
		176	-	235	No function	
		236	-	237	Reset All Functions (except DMX-Address and Mode) (hold 3s)	
		238	-	255	No function	

EN: (1*) After the adjustments have been made, set the value to 000 to avoid disturbance by endless function call.

DE: (1*) Nachdem die Einstellungen vorgenommen wurden, stellen Sie den Wert auf 000 ein, um Störungen durch endlosen Funktionsaufruf zu vermeiden.

FR: (1*) Une fois les ajustements effectués, réglez la valeur sur 000 pour éviter les perturbations par appel de fonction sans fin.

ES: (1*) Después de realizar los ajustes, establezca el valor en 000 para evitar perturbaciones mediante una llamada de función sin fin.

PL: (1*) Po dokonaniu ustawień ustaw wartość na 000, aby uniknąć zakłóceń przez niekończące się wywołanie funkcji.

IT: (1*) Dopo aver effettuato le regolazioni, impostare il valore su 000 per evitare disturbi causati da una chiamata a funzione infinita.